

Simple to adjust

How to adjust the volume filled

FILLFLEX

– the flexible filling machines

Fillflex' control programme is designed to be user-friendly. The operator can therefore easily adjust the filling volume and rate and other settings, even in a comprehensive filling process. This enables the capacity of the Fillflex to be used to the full.



1. Put the new package under the ejector.



2. Press **Man.**
3. Press **On** and hold the button in until the correct volume is delivered.
4. Read off under **Value**
5. Set the value under **Preset** with + and -
6. Press **Off** and **Auto**



7. Ready to run with the new volume!